




HP 75000 SERIES B

HP E1302A Mainframe

User/Service Manual

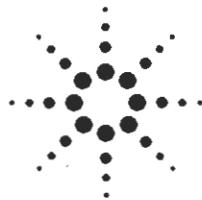

Agilent Technologies



**HEWLETT®
PACKARD**

Copyright© Hewlett-Packard Company, 1994



E1302-90000
E1194

Manual Part Number: E1302-90000
Microfiche Part Number: E1302-99000

Printed: November 1994 Edition 1
Printed in U.S.A. E1194

Printing History

The Printing History shown below lists all Editions and Updates of this manual and the printing date(s). The first printing of the manual is Edition 1. The Edition number increments by 1 whenever the manual is revised. Updates, which are issued between Editions, contain replacement pages to correct the current Edition of the manual. Updates are numbered sequentially starting with Update 1. When a new Edition is created, it contains all the Update information for the previous Edition. Each new Edition or Update also includes a revised copy of this printing history page. Many product updates or revisions do not require manual changes and, conversely, manual corrections may be done without accompanying product changes. Therefore, do not expect a one-to-one correspondence between product updates and manual updates.

Edition 1 (Part Number E1302-90000) November 1994

Safety Symbols



Instruction manual symbol affixed to product. Indicates that the user must refer to the manual for specific Warning or Caution information to avoid personal injury or damage to the product.



Indicates the field wiring terminal that must be connected to earth ground before operating the equipment—protects against electrical shock in case of fault.



OR Frame or chassis ground terminal—typically connects to the equipment's metal frame.



Alternating current (AC).



Direct current (DC).



Indicates hazardous voltages.

WARNING

Calls attention to a procedure, practice, or condition that could cause bodily injury or death.

CAUTION

Calls attention to a procedure, practice, or condition that could possibly cause damage to equipment or permanent loss of data.

WARNINGS

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

Ground the equipment: For Safety Class 1 equipment (equipment having a protective earth terminal), an uninterruptible safety earth ground must be provided from the mains power source to the product input wiring terminals or supplied power cable.

DO NOT operate the product in an explosive atmosphere or in the presence of flammable gases or fumes.

For continued protection against fire, replace the line fuse(s) only with fuse(s) of the same voltage and current rating and type. DO NOT use repaired fuses or short-circuited fuse holders.

Keep away from live circuits: Operating personnel must not remove equipment covers or shields. Procedures involving the removal of covers or shields are for use by service-trained personnel only. Under certain conditions, dangerous voltages may exist even with the equipment switched off. To avoid dangerous electrical shock, DO NOT perform procedures involving cover or shield removal unless you are qualified to do so.

DO NOT operate damaged equipment: Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture, or any other reason, REMOVE POWER and do not use the product until safe operation can be verified by service-trained personnel. If necessary, return the product to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DO NOT service or adjust alone: Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT substitute parts or modify equipment: Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the product. Return the product to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology (formerly National Bureau of Standards), to the extent allowed by that organization's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of three years from date of shipment. Duration and conditions of warranty for this product may be superseded when the product is integrated into (becomes a part of) other HP products. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by Hewlett-Packard (HP). Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with a product will execute its programming instructions when properly installed on that product. HP does not warrant that the operation of the product, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied products or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

The design and implementation of any circuit on this product is the sole responsibility of the Buyer. HP does not warrant the Buyer's circuitry or malfunctions of HP products that result from the Buyer's circuitry. In addition, HP does not warrant any damage that occurs as a result of the Buyer's circuit or any defects that result from Buyer-supplied products.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

NOTICE

The information contained in this document is subject to change without notice. HEWLETT-PACKARD (HP) MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HP shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material. This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company. HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subdivision (b)(3)(ii) of the Rights in Technical Data and Computer Software clause at 52.227-7013. Hewlett-Packard Company; 3000 Hanover Street; Palo Alto, California 94304

DECLARATION OF CONFORMITY
according to ISO/IEC Guide 22 and EN 45014

Manufacturer's Name: Hewlett-Packard Company
Loveland Manufacturing Center

Manufacturer's Address: 815 14th Street S.W.
Loveland, Colorado 80537

declares, that the product

Product Name: B-Size VME/VXI Mainframe

Model Number: E1302A

Product Options: All

conforms to the following Product Specifications:

Safety: IEC 1010-1 (1990) Incl. Amend 1 (1992)/EN61010-1 (1993)
CSA C22.2 #1010.1 (1992)
UL 3111

EMC: CISPR 11:1990/EN55011 (1991): Group1 Class A
IEC 801-2:1991/EN50082-1 (1992): 4kVCD, 8kVAD
IEC 801-3:1984/EN50082-1 (1992): 3 V/m
IEC 801-4:1988/EN50082-1 (1992): 1kV Power Line
.5kV Signal Lines

Supplementary Information: The product herewith complies with the requirements of the low voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC.

November, 1994



Jim White, QA Manager

European contact: Your local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department ZQ/Standards Europe, Herrenberger Straße 130, D-71034 Böblingen

Cut Along This Line

HEWLETT-PACKARD COMPANY
VXI SYSTEMS DIVISION
Learning Products Department
P.O. box 301
LOVELAND, COLORADO 80539

POSTAGE WILL BE PAID BY ADDRESSEE

BUSINESS REPLY MAIL
FIRST CLASS / PERMIT NO. 37 / LOVELAND, COLORADO

Fold Along This Line First




Fold Along This Line Next



Tape — Do Not Staple

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

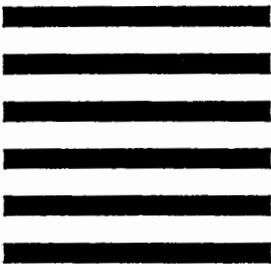

MANUAL COMMENT SHEET

HP E1302A User and Service Manual
Manual Part Number E1302-90000
Edition 1 (November 1994)

You can help us improve our manuals by sharing your comments and suggestions. Please complete this questionnaire after becoming familiar with the manual and then return it to us. In appreciation of your time, we will enter your name in a quarterly drawing for a Hewlett-Packard Palmtop PC.

Please describe the system controller, operating system, programming language, and plug-in modules you are using with your HP E1302A Mainframe.

Please pencil-in one circle for each statement below as it applies to this documentation:

	←-----→				
	Disagree				Agree
• The manual is well organized.	<input type="radio"/>				
• Instructions are easy to understand.	<input type="radio"/>				
• The manual is clearly written.	<input type="radio"/>				
• Illustrations are clear and helpful.	<input type="radio"/>				
• The manual meets my overall expectations.	<input type="radio"/>				

Please write any comments and/or suggestions in the space provided below. Use additional pages if you wish. The more specific your comments, the more useful they are to us.

Your Name: _____

Company: _____

Address: _____

Job Title: _____

City/State: _____

Telephone: _____

Zip/Postal Code: _____

Today's Date: _____

Country: _____

Please fold and tape for mailing.

Contents

Chapter 1 Installing the HP E1302A Mainframe

Installation Steps	1-2
WARNINGS and CAUTIONS	1-2
Step 1: Install Correct Fuse for Your Line Voltage	1-3
Step 2: Rack Mount the Mainframe (Optional)	1-4
Step 3: Install Plug-In Modules	1-5
Step 4: Apply AC Power	1-6
Step 5: Connect Standby DC Power (Optional)	1-7


Chapter 2 Hardware Information

Cleaning Fan Filters	2-1
Custom Wiring the J2 Connectors	2-2
J2 Pinouts	2-2
Accessing the J2 Connector	2-4
Connecting the Wiring	2-5
Replaceable Parts	2-6
Power Supply Troubleshooting and Replacement	2-10

Appendix A Specifications

General Characteristics	A-1
Mechanical Specifications	A-1
Power Specifications	A-2
Environmental and Regulatory	A-3

Installation Steps

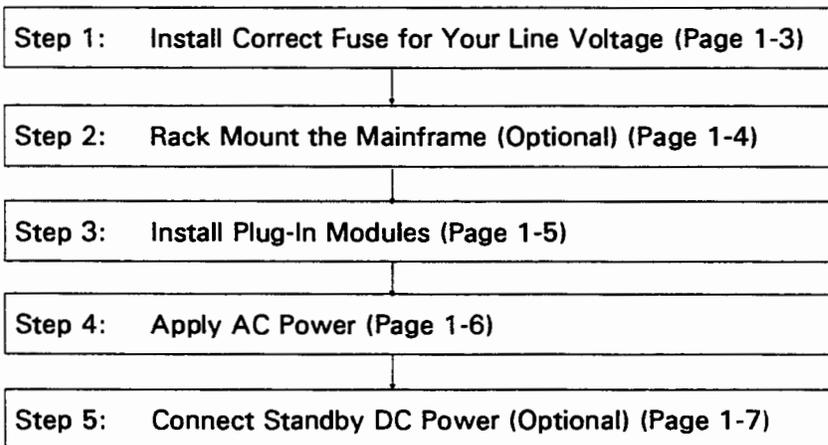

WARNINGS and CAUTIONS

WARNING **SHOCK HAZARD.** Only service-trained personnel who are aware of the hazards involved should install, remove, or configure the system. Before you perform any procedures in this guide, disconnect AC power and field wiring from the mainframe.

CAUTION Do not install modules into the mainframe with power applied. Doing so may damage the modules and the mainframe.


CAUTION **STATIC ELECTRICITY.** Static electricity is a major cause of component failure. To prevent damage to the electrical components in the mainframe and plug-in modules, observe anti-static techniques whenever installing a module into the mainframe.

Chapter 1

Installing the HP E1302A Mainframe


This chapter describes how to install plug-in modules into the mainframe and apply power to the mainframe. Most installation and configuration details depend upon the Command Module, embedded controller, or interface you intend to use. If you bought a Command Module, embedded controller, or interface from Hewlett-Packard, refer to the appropriate installation guide for more detailed installation instructions and programming examples. If you have a controller or interface from another manufacturer, refer to their documentation for installation and configuration information.

HP E1302A
Mainframe

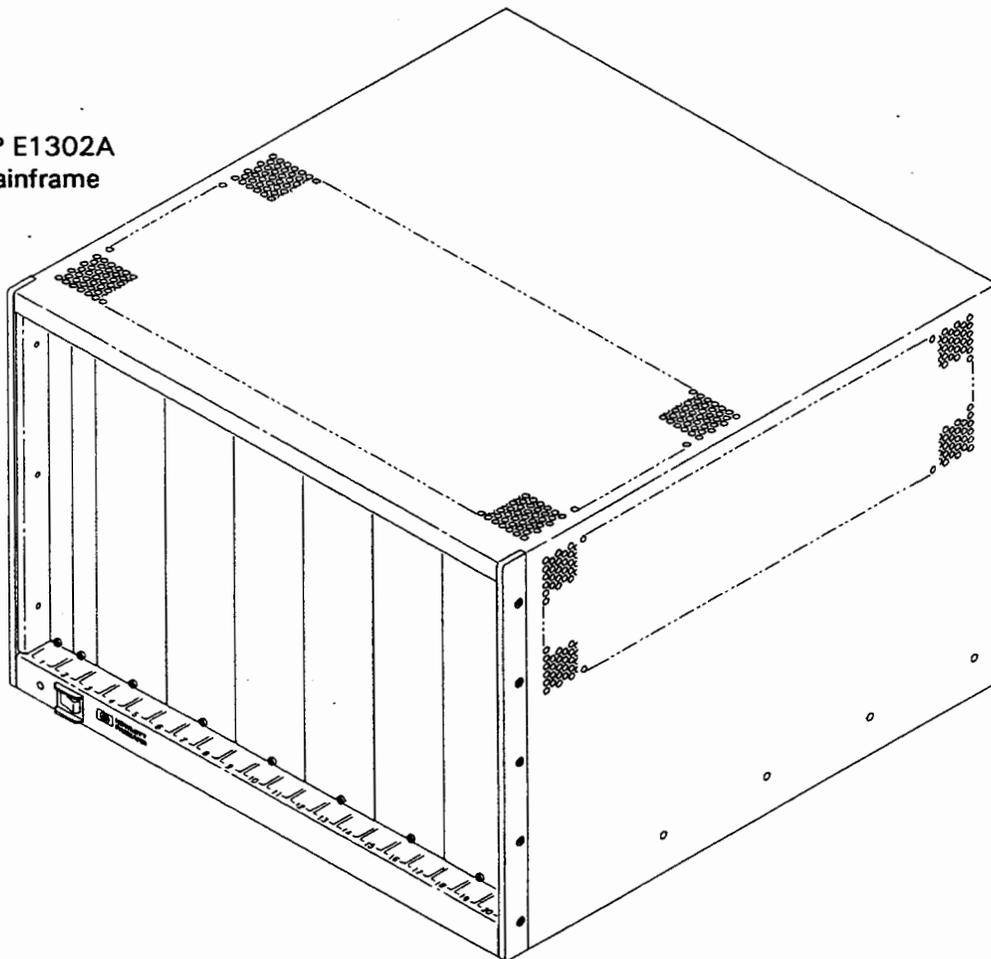

Step 2: Rack Mount the Mainframe (Optional)


Note Simplified rack mount installation steps are shown here. Refer to the instructions provided with the rack mount kits for specific details.

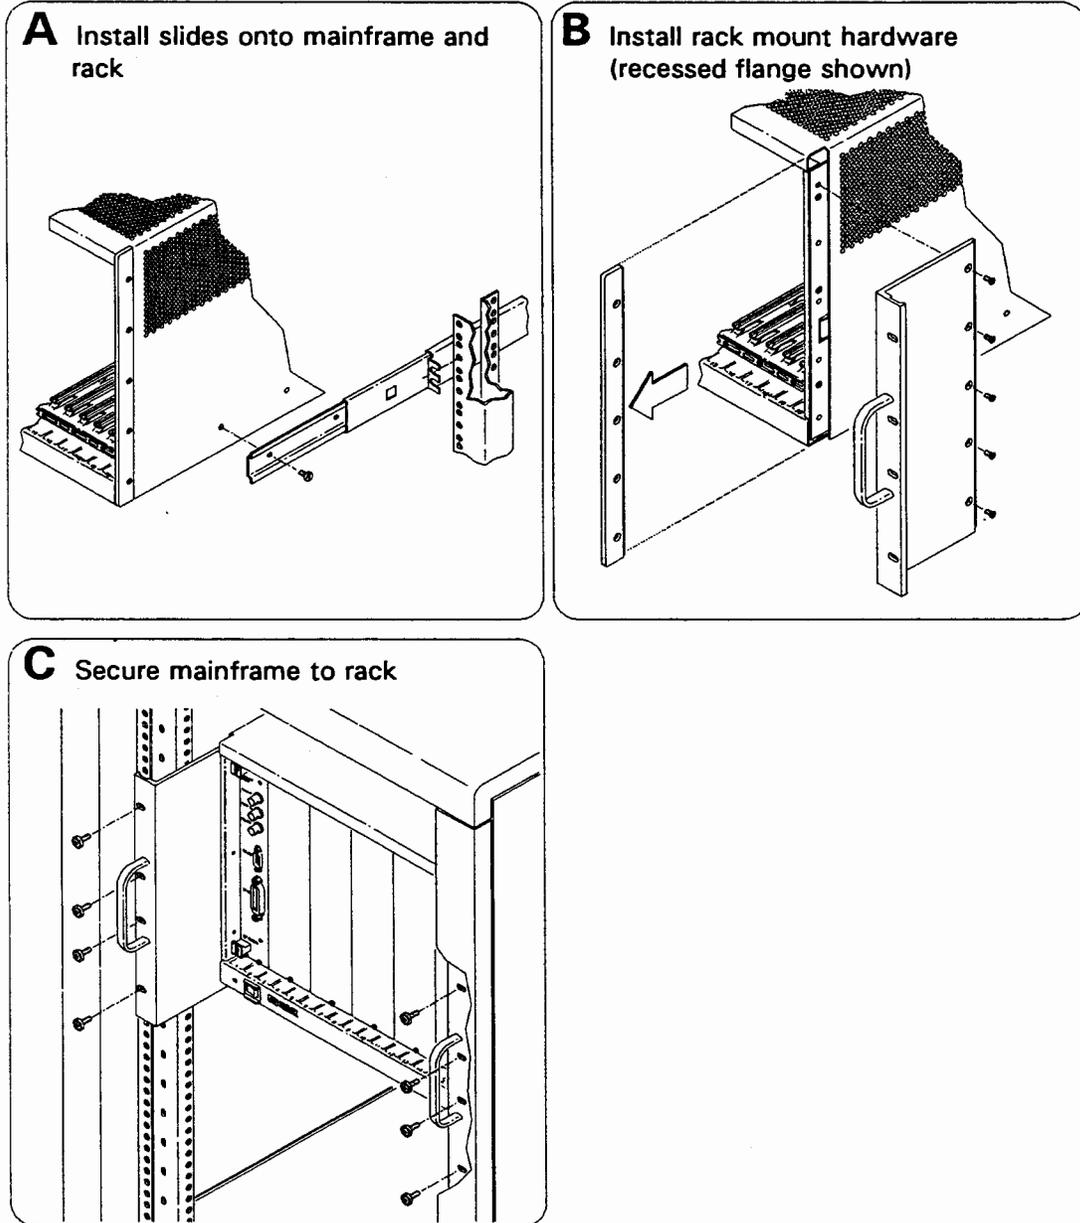

Refer to Chapter 2 for rack mount kit part numbers.


Step 1: Install Correct Fuse for Your Line Voltage

WARNING SHOCK HAZARD. Disconnect power from the mainframe before doing any installation steps.

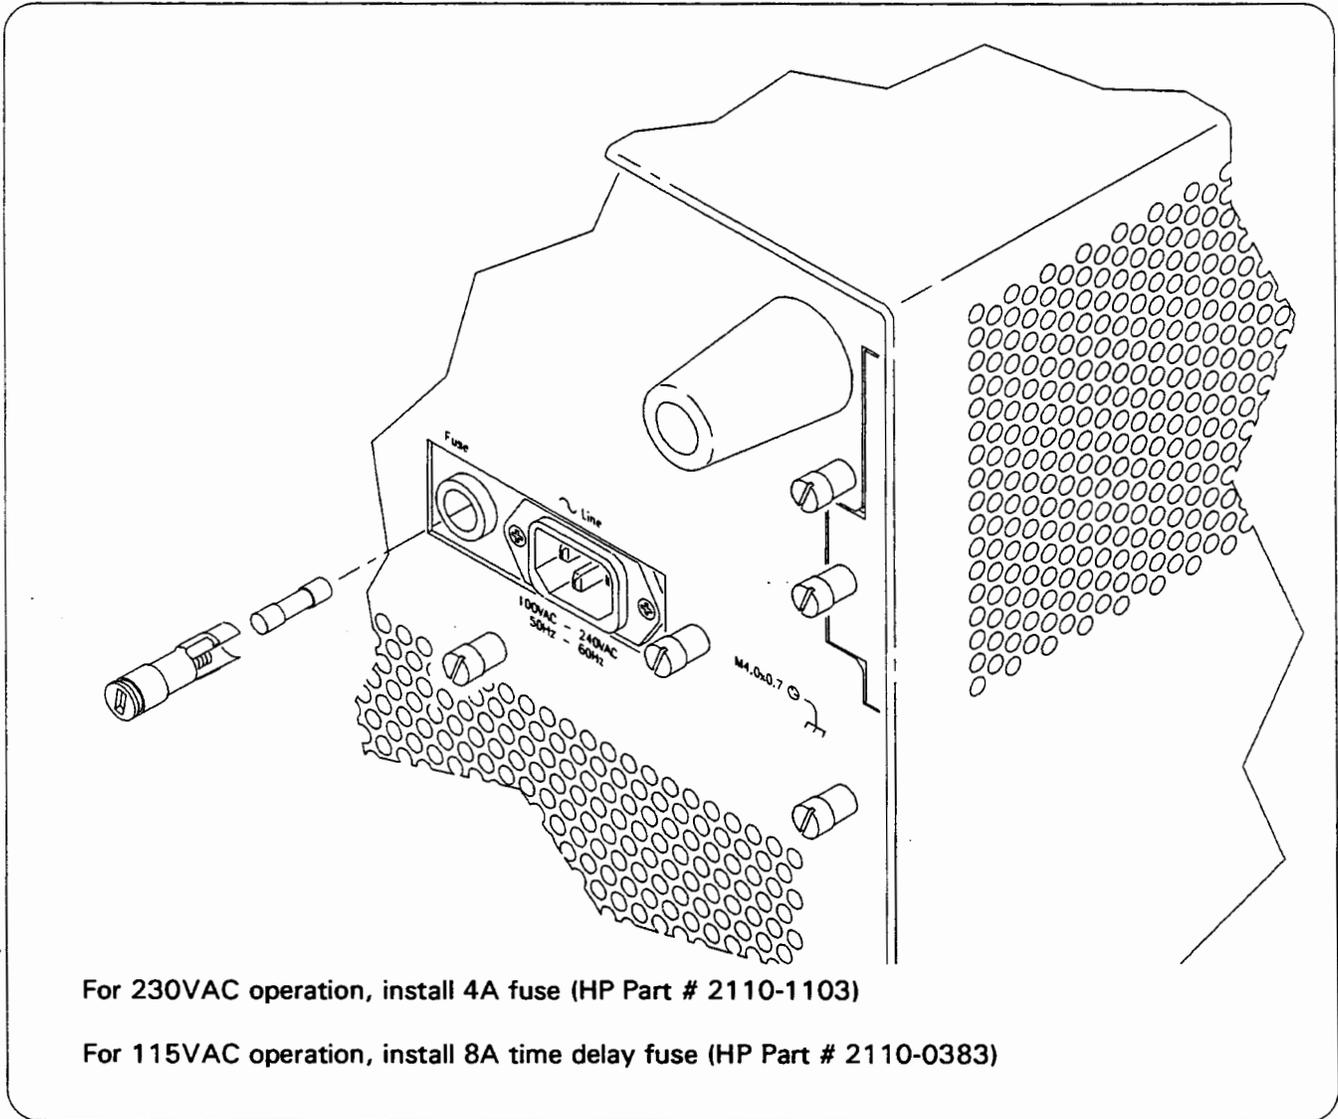

Step 4: Apply AC Power

WARNING The power cord must be plugged into an approved three-contact electrical outlet. The outlet must have its own ground connector connected to an electrical ground.

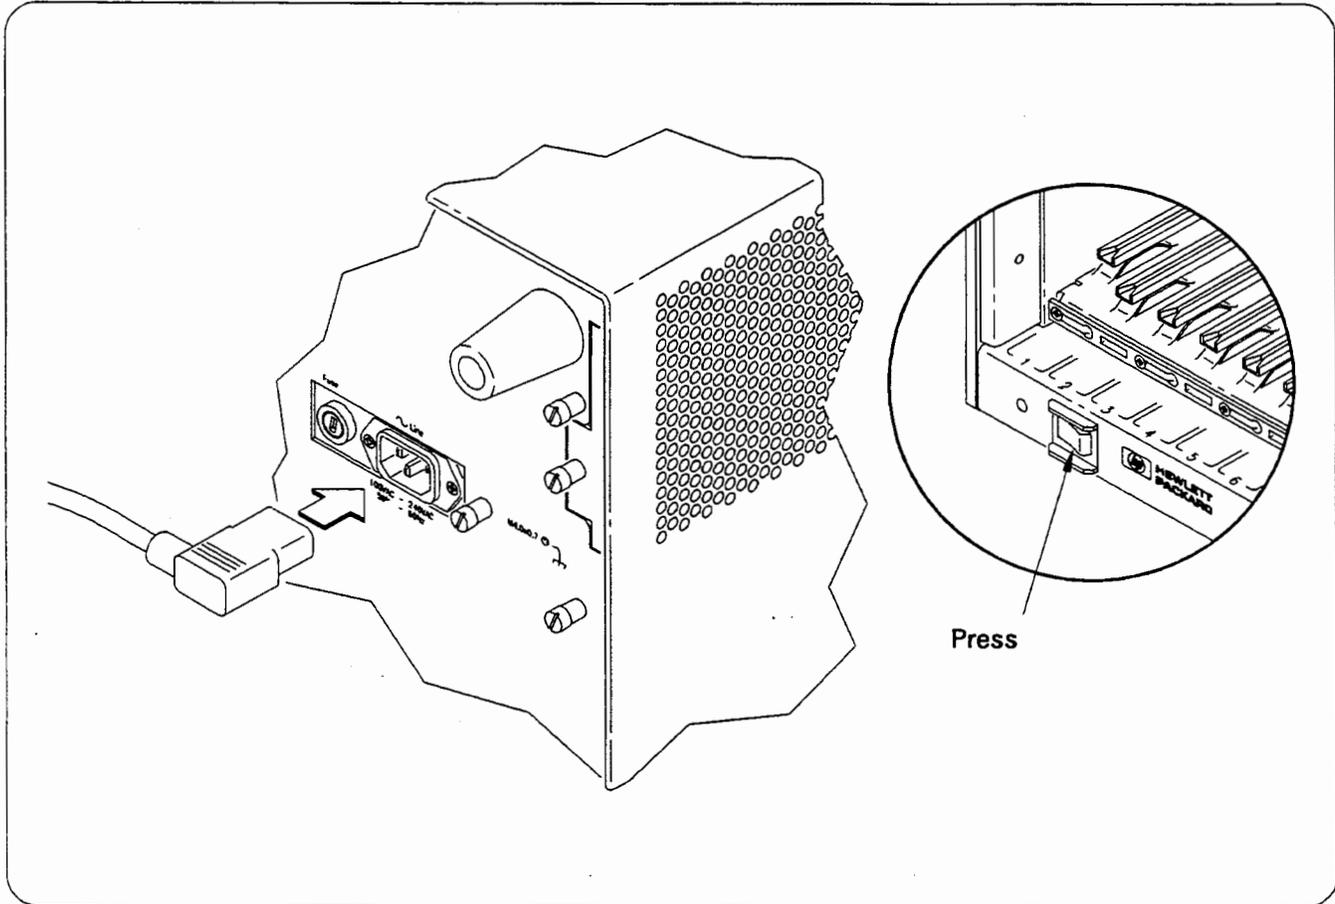


The mainframe's power cord receptacle and power cord meet international safety standards.

Step 3: Install Plug-In Modules

WARNING SHOCK HAZARD. Secure modules tightly to the mainframe and cover all unused slots.

CAUTION To prevent equipment damage, **DISCONNECT** the mainframe's power before installing any module into the mainframe.

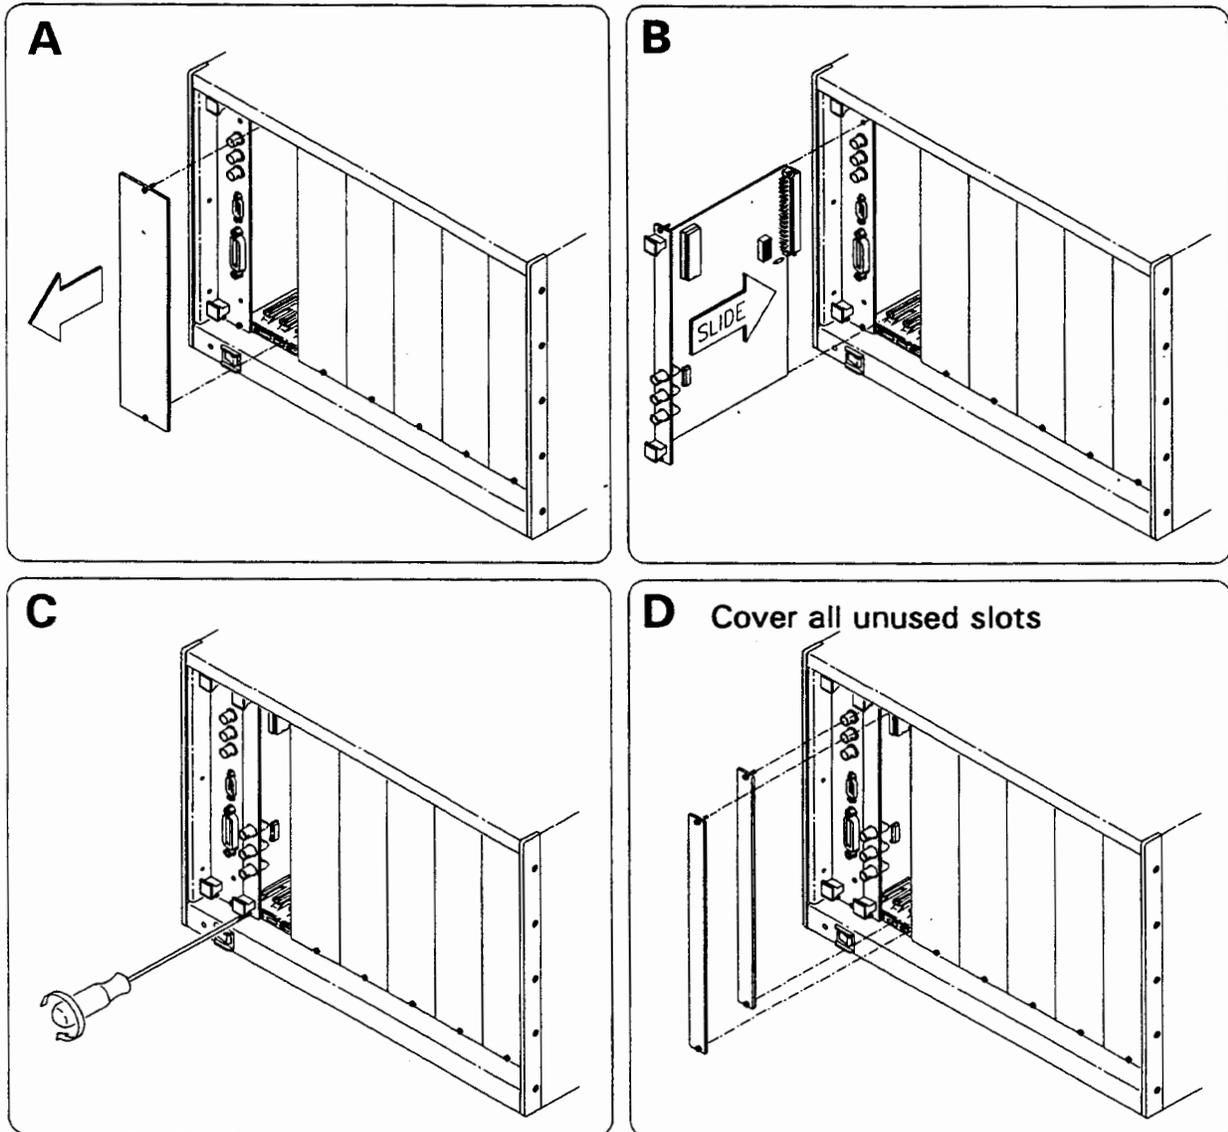


Notes

Step 5: Connect Standby DC Power (Optional)

The mainframe's rear-panel +5VDC Standby input connects to the +5VSTDBY line on the backplane J1 connectors (J1 pin B31). You can connect an external battery or power supply to this input to sustain memory, clocks, and so on when AC power to the mainframe is cut-off.

CAUTION The +5VDC Standby input IS NOT protected from an over-current situation. To prevent equipment damage, use a power source that is current-limited (3A max.) or install a 3A fast-blow fuse in series in the +5V line.

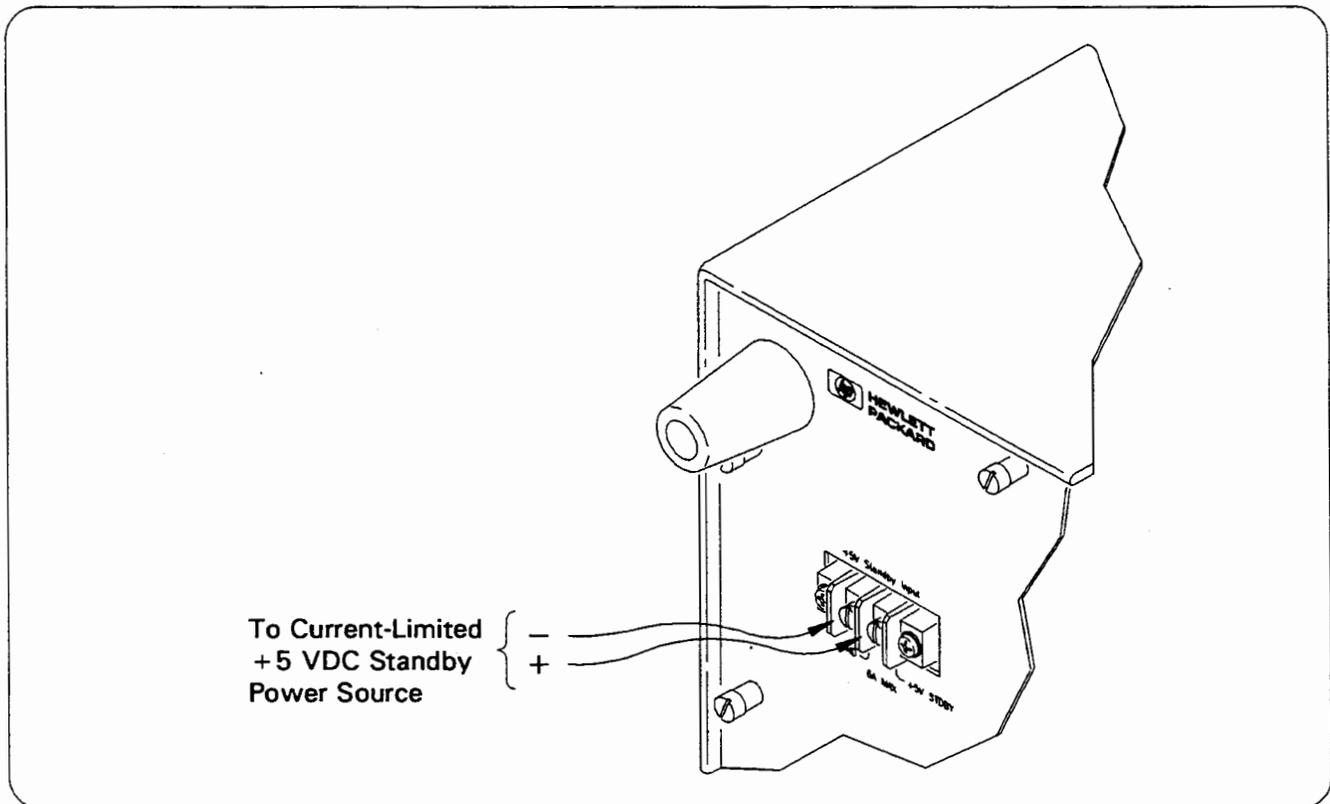

Custom Wiring the J2 Connectors

Each mainframe slot has a J1 (top) and a J2 (bottom) backplane connector. Each J1 connector connects to the VME backplane and conforms to the VME standard. Only the center row (Row B) of the J2 connector connects to the VME backplane. The outer two rows of J2 (Row A and Row C) do not connect to the backplane and are available for custom user wiring. You can access the backside of J2 by removing the mainframe's rear panel and fan assembly (see figure on page 2-4).

J2 Pinouts

Figure 2-1 is a rear-view showing the J2 connector pin numbers. Table 2-1 shows the VME definitions for J2 Row B and the VXibus definitions for J2 Row A and C.

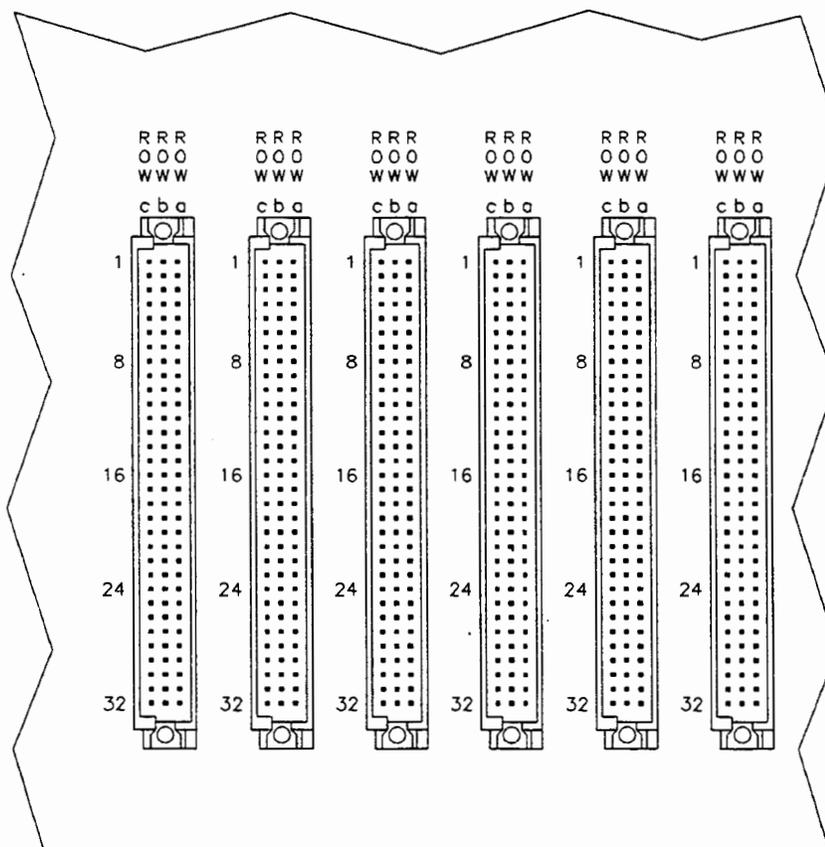


Figure 2-1. Rear-view of J2 Connectors


Chapter 2

Hardware Information

Cleaning Fan Filters

The mainframe has two fan filters. Remove and clean the fan filters regularly.

WARNING SHOCK HAZARD. Only service-trained personnel who are aware of the hazards involved should remove mainframe covers. Before you perform any procedures in this guide, disconnect AC power and field wiring from the mainframe.

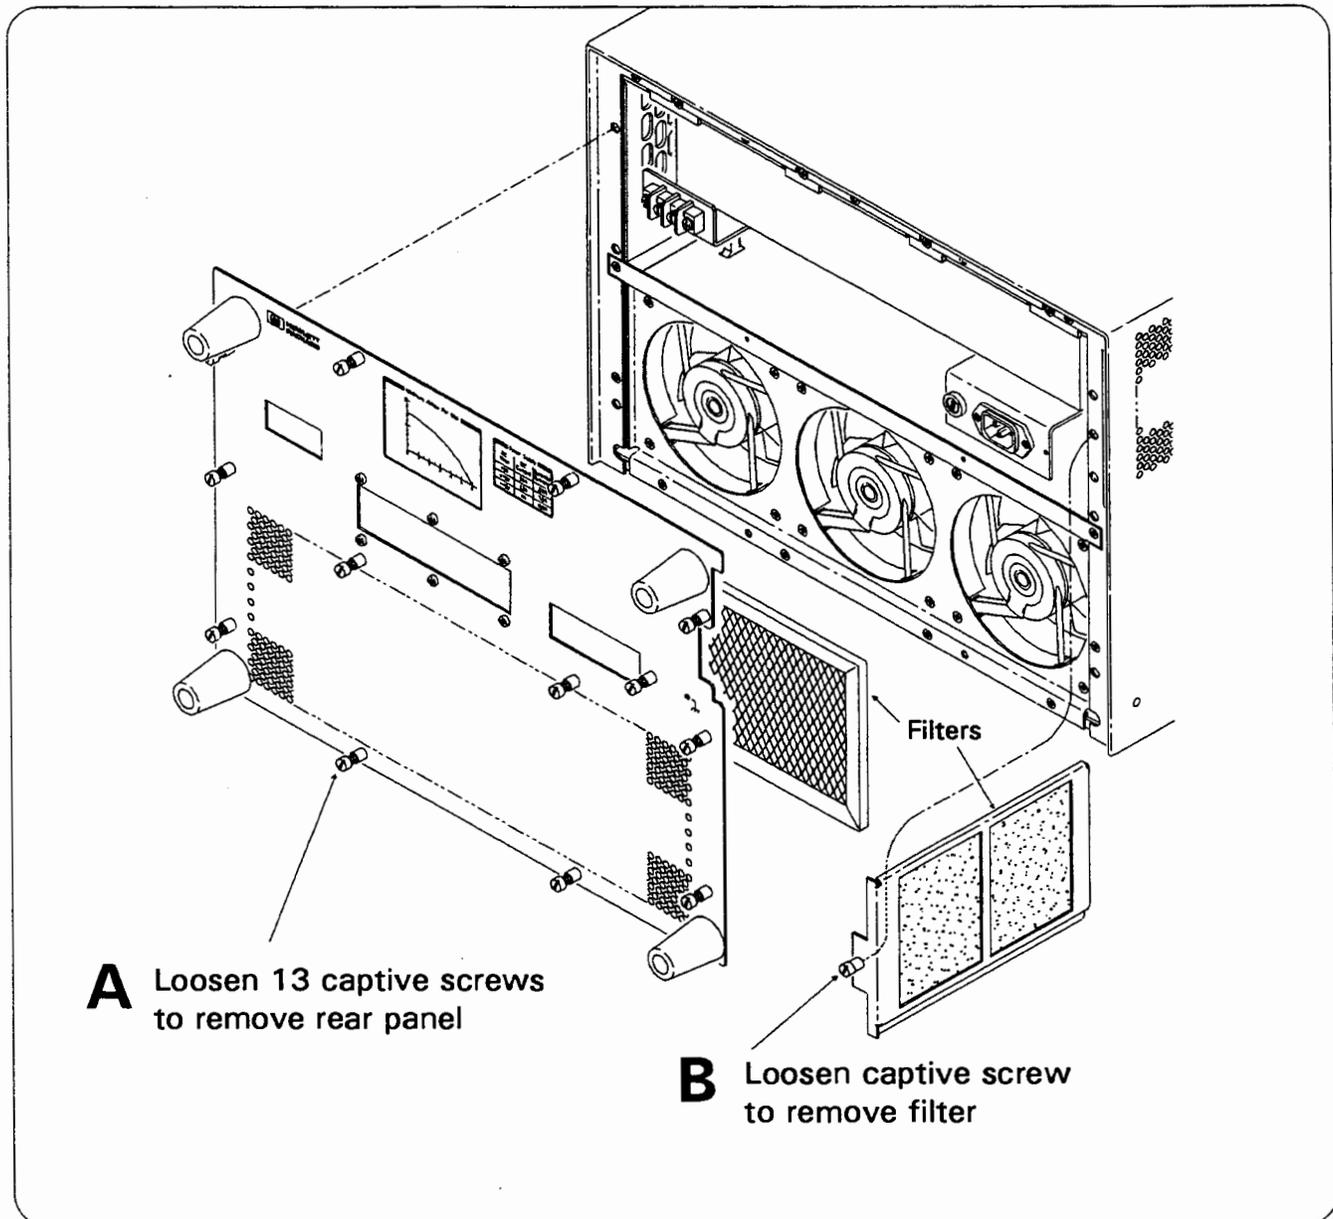

Accessing the J2 Connector

WARNING SHOCK HAZARD. Only service-trained personnel who are aware of the hazards involved should remove mainframe covers. Before you perform any procedures in this guide, disconnect AC power and field wiring from the mainframe.

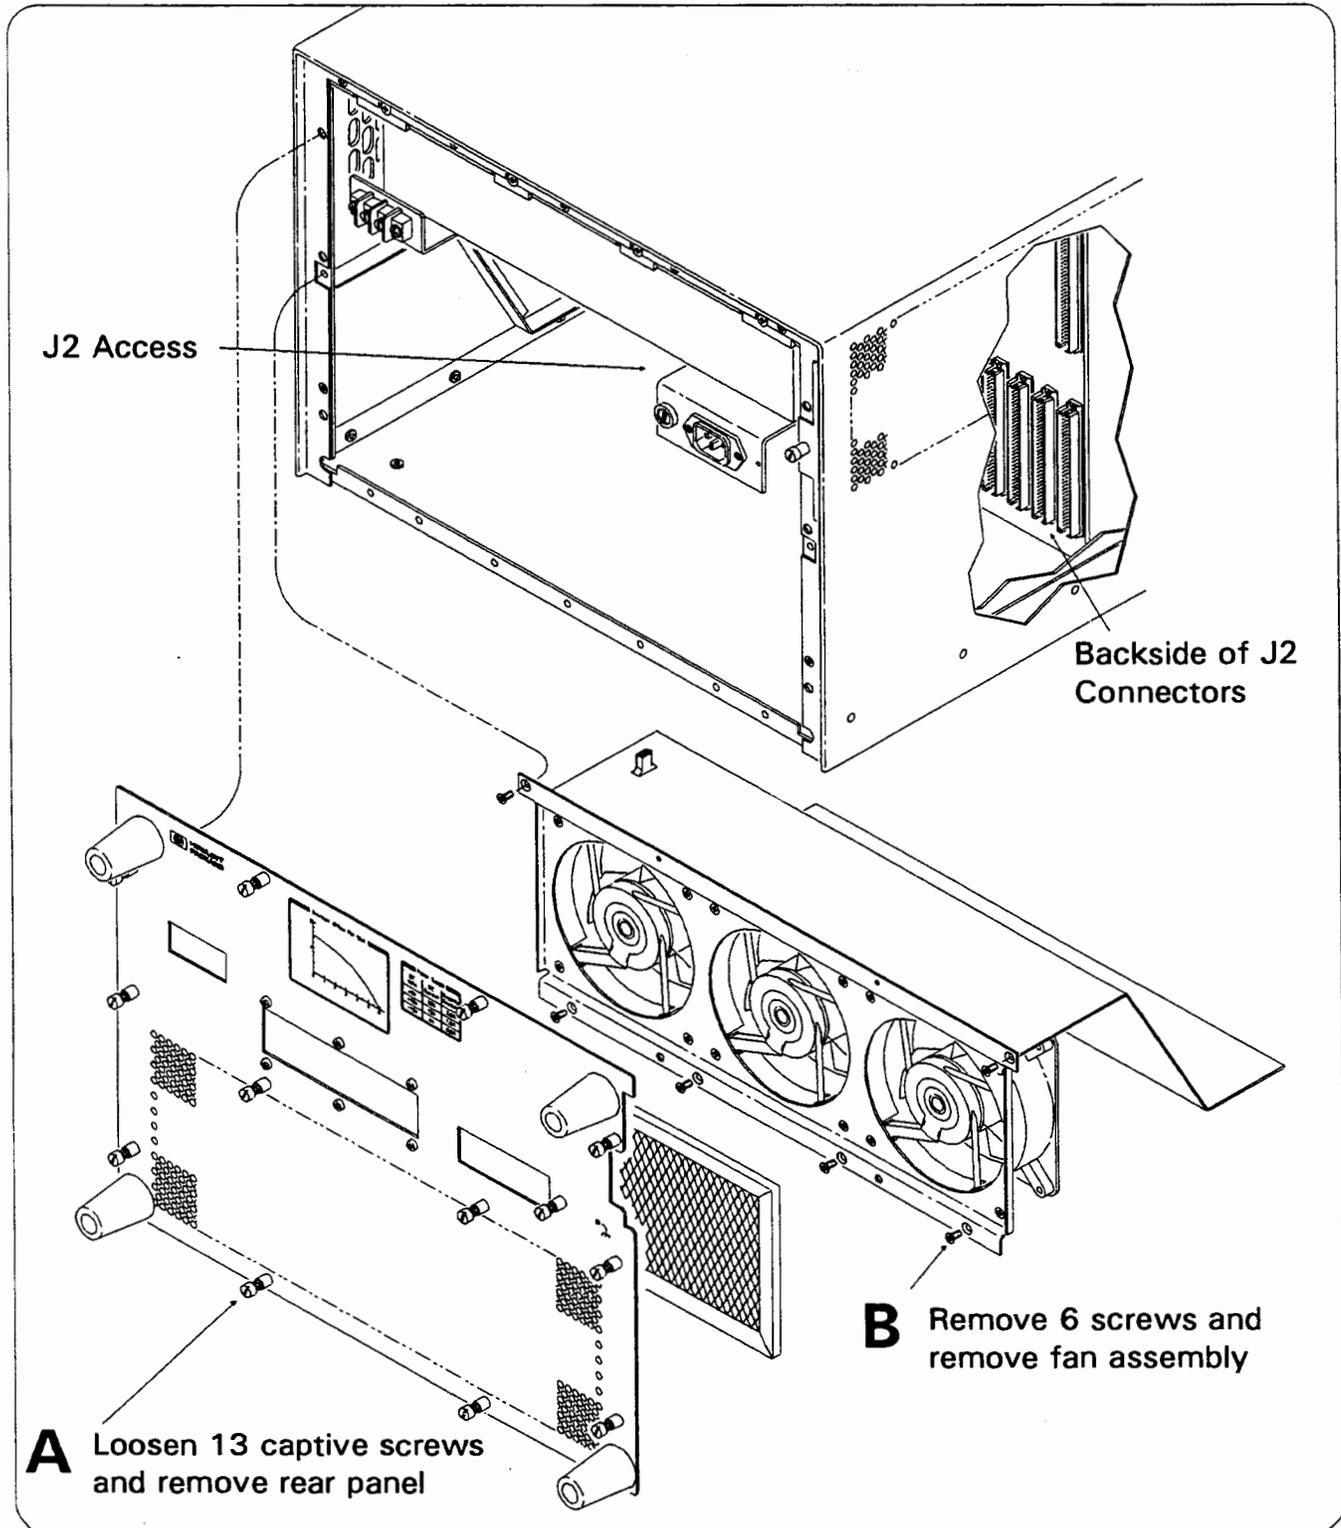


Table 2-1. J2 VME/VXI Pin Assignments

Pin Number	Row C Signal Mnemonic	Row B Signal Mnemonic	Row A Signal Mnemonic	Pin Number
1	CLK10+	+5V	ECLTRG0	1
2	CLK10-	GND	-2V	2
3	GND	RSV1	ECLTRG1	3
4	-5.2V	A24	GND	4
5	LBUSC00	A25	MODID12	5
6	LBUSC01	A26	MODID11	6
7	GND	A27	-5.2V	7
8	LBUSC02	A28	MODID10	8
9	LBUSC03	A29	MODID09	9
10	GND	A30	GND	10
11	LBUSC04	A31	MODID08	11
12	LBUSC05	GND	MODID07	12
13	-2V	+5V	-5.2V	13
14	LBUSC06	D16	MODID06	14
15	LBUSC07	D17	MODID05	15
16	GND	D18	GND	16
17	LBUSC08	D19	MODID04	17
18	LBUSC09	D20	MODID03	18
19	-5.2V	D21	-5.2V	19
20	LBUSC10	D22	MODID02	20
21	LBUSC11	D23	MODID01	21
22	GND	GND	GND	22
23	TTLTRG1*	D24	TTLTRG0*	23
24	TTLTRG3*	D25	TTLTRG2*	24
25	GND	D26	+5V	25
26	TTLTRG5*	D27	TTLTRG4*	26
27	TTLTRG7*	D28	TTLTRG6*	27
28	GND	D29	GND	28
29	RSV3	D30	RSV2	29
30	GND	D31	MODID00	30
31	+24V	GND	GND	31
32	-24V	+5V	SUMBUS	32

Important Rows A and C (shaded) are VXIbus-defined and are NOT connected to the backplane. Row B (unshaded) is VME-defined and IS connected to the backplane.

Replaceable Parts

Table 2-2. Replaceable Parts (referenced to Figures 2-3 and 2-4)

Reference Number	Description	Part Number
--	Complete Mainframe	E1302-69400 (with exchange) E1302-66400 (without exchange)
1	Power Supply Assembly, 350W	E1302-69200 (with exchange) E1302-66200 (without exchange)
2	Fan, 110 CFM, 12VDC (4 required per mainframe)	3160-1007
3	Fuse, 8A Time Delay (for 115VAC operation) Fuse, 4A 5 x 20mm (for 230VAC operation)	2110-0383 2110-1103
4	Fuse Holder (1/4 in. x 1 1/4 in. quick connect)	2110-0564
5	Fuse Carrier--for 1/4 in. fuse (for 115VAC operation) Fuse Carrier-- 5 x 20mm (for 230VAC operation)	2110-0565 2110-0567
11	Rubber foot (4 required per mainframe)	0403-0163
6	Air Filter Frame	06-0702848
7	Air Filter Foam	06-0702850
8	Rear Panel	06-0702811
9	Filter Plate	06-0702818
10	Bumper, Polyastomer (4 required per mainframe)	28-0000676
12	Removable Connector Panel	06-0702852B
13	Trim Plate, Left Chassis	06-0702824-01
14	Trim Plate, Right Chassis	06-0702824-02
15	Shroud (chassis cover)	06-0702829
16	Trim, Bottom	06-0702844
17	Trim, Left-Right (2 required per mainframe)	06-0702845
18	Trim, Top	06-0702846
19	AC Power Switch	51-0000090

Unshaded items in Table 2-2 are available directly from Hewlett-Packard (Sales and Service Offices are listed in the back of this manual). Shaded items are available from:

Electronic Solutions
6790 Flanders Drive
San Diego, CA 92121
(819) 452-9333
(800) 854-7086

Connecting the Wiring

You can attach the wiring to any DIN41612-C female connector (for example, an HP 1252-4326 DIN connector with solder-eye terminations). After attaching the wiring, plug the connectors onto the backside of the appropriate J2 connectors as shown in Figure 2-2. Using this technique, complex wiring harnesses can be built and installed in the HP E1302A. These harnesses can consist of wire-wrap, solder-eye, crimp, or printed-circuit board connectors. You can also connect the wiring harness to external equipment by installing bulkhead connectors in the rear-panel's removable connector panel (see Figure 2-3).

Example: Custom Wiring J2 for HP E1313A Trigger Signals

This example shows you how to connect a VXI-defined TTLTRG <n> line between two HP E1313A Scanning DVM modules. By doing this, the two modules can be synchronized to scan in unison. The figure below shows the wiring to connect TTLTRG0* line to the two modules. Notice that since the HP E1313A is a multiple-slot device, wiring is done to the J2 connector corresponding to each E1313's **third** slot.

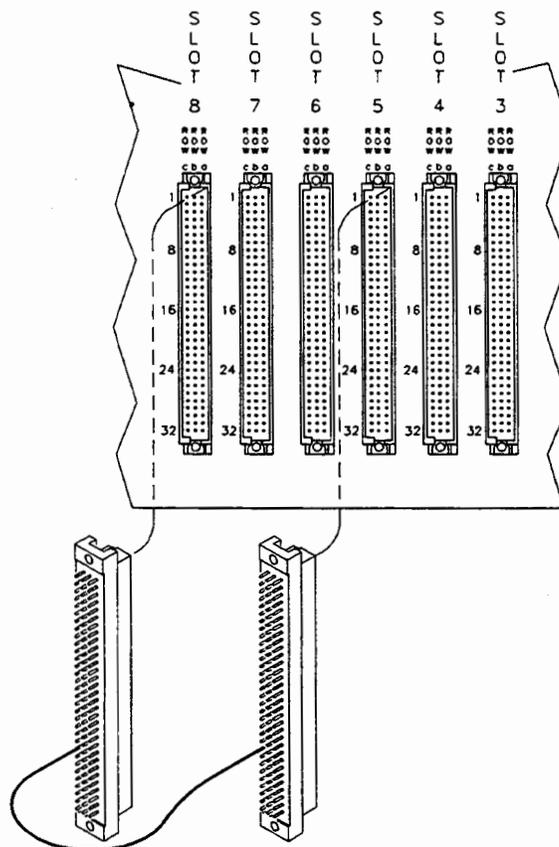


Figure 2-2. J2 Connector Wiring Example

In this example, module 1 is set up to source a trigger signal on the TTLTRG0 line and module 2 is triggered by that signal. This means that whenever module #1 is triggered it also triggers module #2. (Refer to the "HP E1313A User's Manual" for module for detailed programming information.)

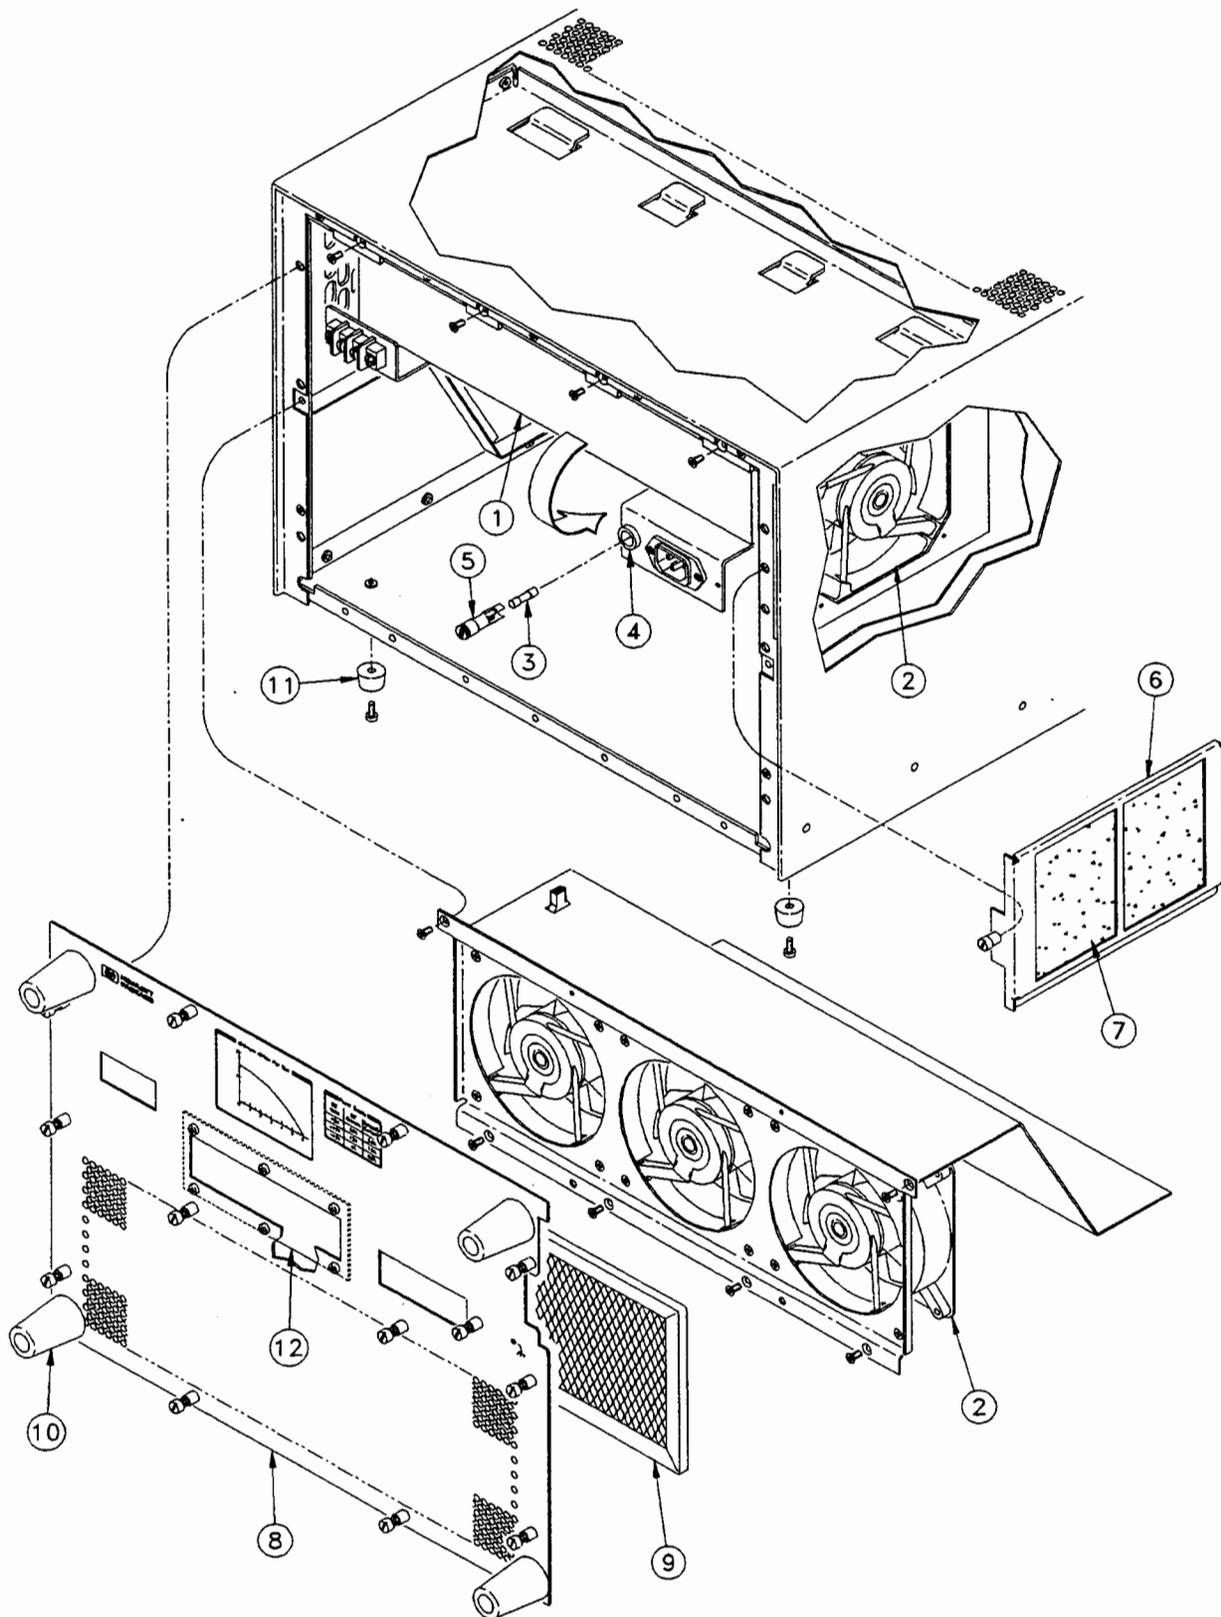


Figure 2-3 Replaceable Parts (rear view)

Table 2-3. Replacement Power Cords

Country	Part Number	Voltage	Rated Amps	Type
U.K.	8120-1703	250 VAC	10A	Right Angle Connector
Australia	8120-0696	250 VAC	10A	Right Angle Connector
Europe	8120-1692	250 VAC	10A	Right Angle Connector
US/Canada	8120-1521	125 VAC	10A	Right Angle Connector
Switzerland	8120-2296	250 VAC	6A	Right Angle Connector
Denmark	8120-2957	220 VAC	10A	Right Angle Connector
S. Africa	8120-4600	250 VAC	10A	Right Angle Connector
Japan	8120-4754	125 VAC	12A	Right Angle Connector
Israel	8120-5181	250 VAC	6A	Right Angle Connector

Table 2-4. Rack Mount Field Installation Kits

Description	HP Part Number
Rack Mount and Rack Slides Kit	E1302-61200
Recessed Rack Mount and Rack Slides Kit	E1302-61201

Items in Table 2-3 and 2-4 are available directly from Hewlett-Packard (Sales and Service Offices are listed in the back of this manual).

Power Supply Troubleshooting and Replacement

Table 2-4 shows the various power supply voltages and their corresponding J1/J2 pinouts. Although traces are provided in each slot for +5V STDBY (connector J1, pin B31), this voltage is not provided by the mainframe's power supply. If +5V STDBY power is required for your application, you must provide it from an external, current-limited supply via the mainframe's rear-panel connector.

Table 2-4. Backplane Connector Voltage and GND Pinouts

Signal	Connector and Pin Numbers
+ 5 VDC	(J1) A32, B32, C32 (J2) B1, B13, B32
+ 12 VDC	(J1) C31
- 12 VDC	(J1) A31
Ground	(J1) A9, A11, A15, A17, A19, B20, B23, C9 (J2) B2, B12, B22, B31

The entire power supply assembly is available as a replacement unit (see Table 2-2). If you have determined that the power supply has failed, remove it as follows:

1. Remove the mainframe's rear panel and fan assembly (see figure on page 2-4).
2. As shown in Figure 2-5, while holding the weight of the power supply with one hand, remove the 4 screws securing the power supply--**the power supply will drop down when the last screw is removed.**
3. Rest the power supply on the mainframe floor and disconnect the cable connectors.
4. Perform these steps in reverse order to install the replacement power supply assembly.

Note All sub-assemblies and cables attached to the power supply are part of the power supply assembly. You DO NOT have to save and re-use any parts from the old power supply assembly.

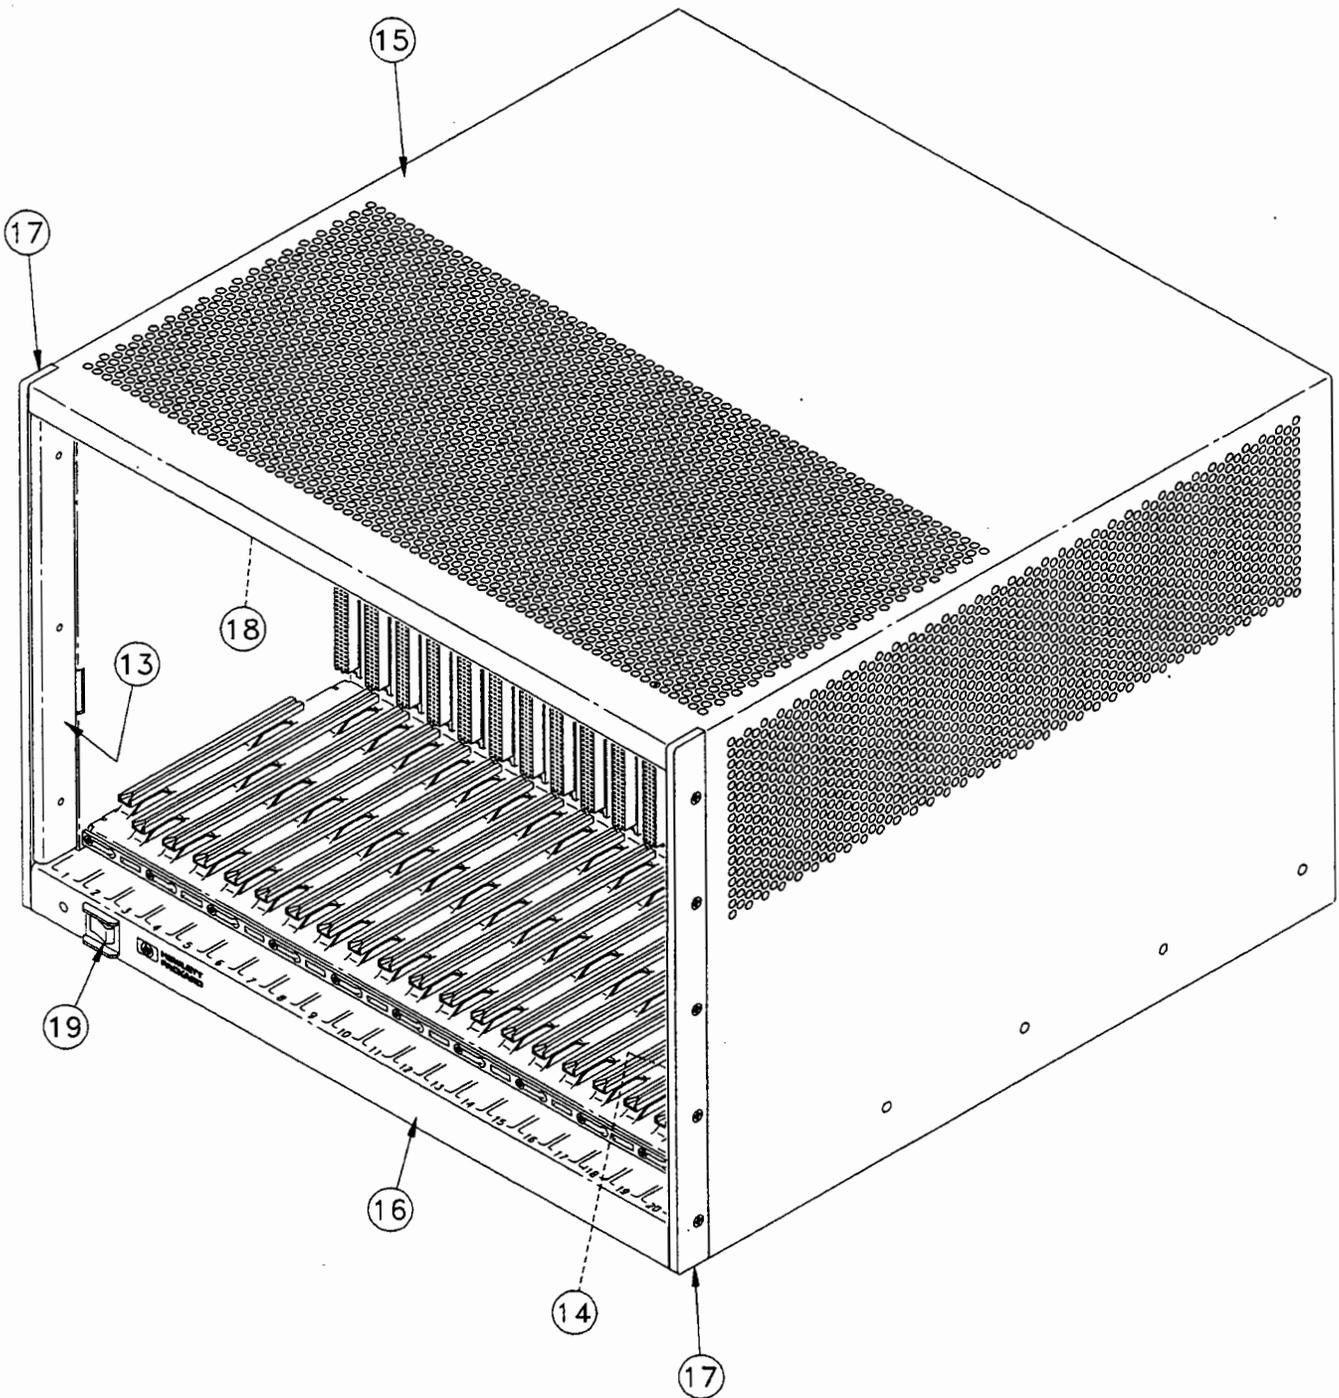


Figure 2-4 Replaceable Parts (front view)

Notes

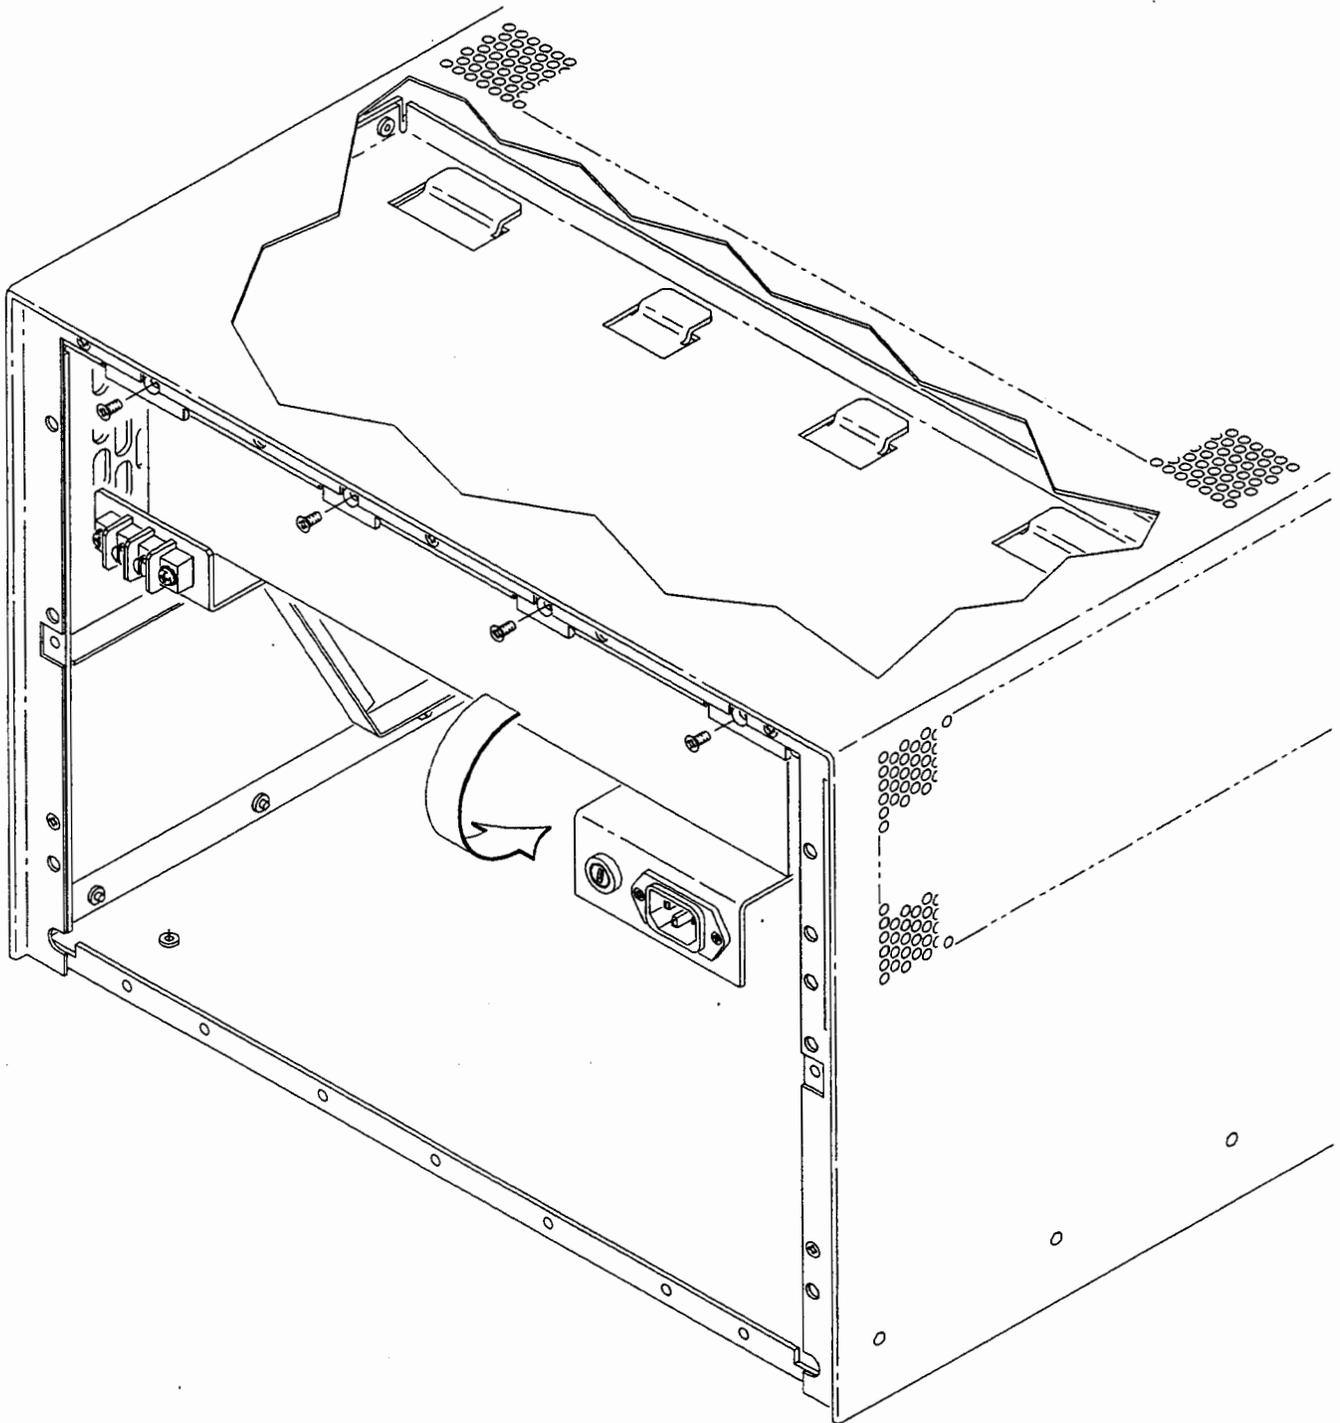


Figure 2-5 Removing the Power Supply

Power Specifications

Power Output

The power supply generates backplane logic signals ACFAIL* and SYSRESET* in full compliance with the VXI specification, Revision 1.4.

DC Output Voltage	Peak Current I _{MP}	Dynamic Current I _{MD}
+5 V	50 A	3.5 A
+12 V	8 A	1.5 A
-12 V	4 A	0.5 A

350W maximum at 50°C

300W maximum at 55°C

Power Supply Protection

All outputs are protected from over-temperature, over-voltage, over-current, short-to-ground, and short to other supplies. Protection mode is full shutdown. Recovery occurs when unit has cooled or fault is removed.

Power Input

- **Input Voltage:** 90 VAC to 132 VAC, 180 VAC to 264 VAC
- **Input Frequency:** 47 Hz to 63 Hz
- **Inrush Current:** < 18 A at 230 VAC
- **+5VSTDBY:** 3 A Maximum. (User supplied. Power taps located on rear panel for input of standby voltage and ground to backplane.)

Appendix A

Specifications

General Characteristics

Air Flow and Power Supply Serviceability

- Power input and cooling air intake through the rear.
- Power supply and fans are serviceable through the rear panel.
- Cooling air exhaust through the sides and top.
- Air filters are mounted on the rear panel, accessible with tools for cleaning.

Backplane

- Monolithic
- 20-slots
- VME/VXI backplane connections to J1 and center row (row B) of J2.
- Rows A and C of J2 are not connected to the VME/VXI backplane. They are accessible on rear of backplane for custom wiring.
- Solid-state automatic daisy-chain provides jumpering for the VMEbus grant and interrupt acknowledge lines, eliminating the need for hand selection of switch settings.

Mechanical Specifications

Size:

- Height without bottom feet: 311 mm (12.25 in.)
- Height with bottom feet: 324 mm (12.75 in.)
- Width: 432 mm (17.0 in.)
- Depth without rear feet: 432 mm (17.0 in.)
- Depth with rear feet: 470 mm (18.5 in.)


Note Allow at least 100 mm (4 in.) in front of the mainframe for terminal blocks and cabling.

Weight: 15.5 kg (34 lb.)

Notes

Cooling

- **Temperature rise:** 10°C (through the module for a 30 W module with typical density)
- **Minimum Airflow Per Slot:**

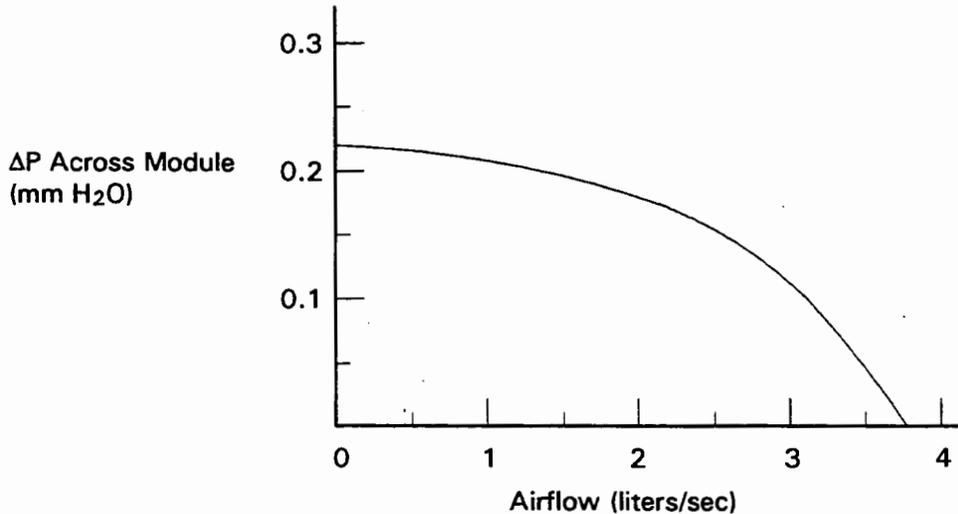

For typical load of 30W/slot, temperature rise $\leq 10^\circ\text{C}$.

Environmental and Regulatory

Temperature

- **Operating Range:** 300W Load: 0°C to +55°C
350W Load: 0°C to +50°C
- **Storage Range:** -40°C to +70°C

Humidity

- **Operating:**
Maximum: 95% RH at 40°C
- **Non-Operating:**
Nominal: 95% RH at 60°C

Acoustic Noise

Less than 55 dBA sound pressure at bystander position (measured 1 M in front of product per DIN 45635T.1)

Lpa = 55 dB fiktiver Arbeitsplatz, normalier Betrieb, nach DIN 45635T.1

M

Mainframe:

- applying AC power, 1-6
- connecting DC power, 1-7
- installing fuse, 1-3
- installing modules in, 1-5
- rack mounting, 1-4

Maintenance, cleaning fan filters, 2-1

Mechanical specifications, A-1

Module, installing plug-in, 1-5

N

Noise (acoustic) specification, A-3

P

Part numbers

- rack mount kits, 2-7

Part numbers, power cords, 2-7

Part numbers, replaceable parts, 2-6

Part numbers:

- fuses, 2-6

Parts, replaceable, 2-6

Pin assignments, J2, 2-3

Pin numbers, J2, 2-2

Pinouts, J2, 2-2

Power and grounding warning, 1-6

Power applied:

- caution, 1-2
- warning, 1-3

Power cords, replacement, 2-7

Power fuse, installing, 1-3

Power supply protection specifications, A-2

Power supply serviceability (specifications), A-1

Power, applying, 1-6

Power:

- input specifications, A-2
- output specification, A-2

R

Rack mount kits, part numbers, 2-7

Rack mounting the mainframe, 1-4

Regulatory specifications, A-3

Replaceable parts, 2-6

Replacement fuses, 2-6

Replacement power cords, 2-7

S

Shock hazard warnings, 1-2, 2-1, 2-4

Size specifications, A-1

Specifications, A-1 - A-4

Standby DC power, connecting, 1-7

Static electricity caution, 1-2

Step 1: install fuse, 1-3

Step 2: rack mount the mainframe, 1-4

Step 3: install plug-in modules, 1-5

Step 4: apply AC power, 1-6

Step 5: connect standby DC power, 1-7

Steps, installation, 1-2

Synchronizing HP E1313As, example, 2-5

T

Temperature specifications, A-3

Trigger signals, wiring J2 for, 2-5

TTLTRG line, 2-5

W

Warning:

- power and grounding requirements, 1-6
- remove power cord, 1-3
- shock hazards, 1-2, 2-1, 2-4

Warnings and cautions, 1-2

Weight specification, A-1

Wiring J2 connectors, 2-2

Index

A

AC power fuse, installing, 1-3
Accessing the J2 connector, 2-4
Acoustic noise specification, A-3
Air flow specifications, A-1
Apply AC power, 1-6

B

Backplane specifications, A-1

C

Caution:
 disconnect power before installing modules, 1-5
 installing modules, 1-2
 static electricity, 1-2
Characteristics (specifications), A-1
Cleaning fan filters, 2-1
Conformity, declaration, v
Connecting standby DC power, 1-7
Connector:
 accessing J2, 2-4
 J2 pinouts, 2-2
 J2 wiring, 2-2
 J2 wiring example, 2-5
Cooling specification, A-3
Custom wiring J2 connectors, 2-2

D

DC power, connecting, 1-7
Declaration of conformity, v

E

Environment and regulatory specifications, A-3
Example:
 custom wiring J2, 2-5

F

Fan filters, cleaning, 2-1
Filters, cleaning fan, 2-1
Fuse, installing, 1-3
Fuses, part numbers, 2-6

G

General characteristics (specifications), A-1
Grounding and power warning, 1-6

H

HP E1313A, wiring trigger signals example, 2-5
HP part numbers, 2-6
Humidity specifications, A-3

I

Installation steps, 1-2
Installing modules caution, 1-2
Installing plug-in modules, 1-5

J

J1 and J2 specifications, A-1
J2 connector:
 accessing, 2-4
 custom wiring, 2-2
 pin assignments, 2-3
 pinouts, 2-2
 wiring example, 2-5

L

Line power fuse, installing, 1-3
Line power:
 fuses, replacement, 2-6

SALES & SUPPORT OFFICES

Arranged alphabetically by country

KOREA

Samsung Hewlett-Packard Co. Ltd.
Dongbang Yeosu Building
12-16th Floors
36-1 Yeosu-Dong
Youngdeungpo-Ku
SEOUL
Tel: 784-4666, 784-2666
Telex: 25166 SAMSAN K

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
9th Floor
Chung Khai Bank Building
46, Jalan Raja Laut
50350 KUALA LUMPUR
Tel: 2986555
Telex: 31011 HPSM MA

MEXICO

Hewlett-Packard de Mexico,
S.A. de C.V.
Monte Pelvoux No. 111
Lomas de Chapultepec
11000 MEXICO, D.F.
Tel: 5-40-62-28, 72-66, 50-25
Telex: 17-74-507 HEWPACK MEX

NETHERLANDS

Hewlett-Packard Nederland B.V.
Startbaan 16
NL-1187 XR AMSTELVEEN
P.O. Box 667
NL-1180 AR AMSTELVEEN
Tel: (020) 547-6911
Telex: 13 216 HEPA NL

NORWAY

Hewlett-Packard Norge A/S
Osterdalen 16-18
P.O. Box 34
N-1345 OESTERAAS
Tel: 0047/2/24 60 90
Telex: 76621 hpnas n

PUERTO RICO

Hewlett-Packard Puerto Rico
101 Muñoz Rivera Av
Esu. Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800

SAUDI ARABIA

Modern Electronics Establishment
Hewlett-Packard Division
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 96 28
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
#08-00 Inchcape House
450-2 Alexandra Road
Alexandra P.O. Box 58
SINGAPORE, 9115
Tel: 4731788
Telex: 34209 HPSGSO RS
Cable: HEWPACK, Singapore

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.
9 Eastern Service Road
Eastgate Ext. 3
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877 SA
Cable: HEWPACK Johannesburg

SPAIN

Hewlett-Packard Española, S.A.
Ctra. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
Telex: 23515 HPE

SWEDEN

Hewlett-Packard Sverige AB
Skalhögsgatan 9, Kista
Box 19
S-16393 SPÅNGA
Tel: (08) 750-2000
Telex: (854) 17886
Telefax: (08) 7527781

SWITZERLAND

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case postale 365
CH-1217 MEYRIN 1
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH

TAIWAN

Hewlett-Packard Taiwan Ltd.
8th Floor, Hewlett-Packard Building
337 Fu Hsing North Road
TAIPEI

Tel: (02) 712-0404
Telex: 24439 HEWPACK
Cable: HEWPACK Taipei

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Karaklidere

ANKARA

Tel: 275800
Telex: 42155 TKNM TR

UNITED KINGDOM**ENGLAND**

Hewlett-Packard Ltd.
Heathside Park Road
Cheadle Heath
STOCKPORT
Cheshire
SK3 ORB
Tel: 061-428-0828
Telex: 668068

Hewlett-Packard Ltd.
King Street Lane
Winnersh, WOKINGHAM

Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847178

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031 331 1188
Telex: 72682

UNITED STATES**Alabama**

Hewlett-Packard Co.
420 Wynn Drive
HUNTSVILLE, AL 35805
Tel: (205) 830-2000

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000

California

Hewlett-Packard Co.
1421 S. Manhattan Av.
FULLERTON, CA 92631
Tel: (714) 999-6700

Hewlett-Packard Co.
5651 West Manchester Ave.
LOS ANGELES, CA 90045
Tel: (213) 337-8000
Telex: 910-325-6608

Hewlett-Packard Co.
9606 Aero Drive
SAN DIEGO, CA 92123
Tel: (619) 279-3200

Hewlett-Packard Co.
3003 Scott Boulevard
SANTA CLARA, CA 95054
Tel: (408) 988-7000
Telex: 910-338-0586

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
WALLINGFORD, CT 06492
Tel: (203) 265-7801

Florida

Hewlett-Packard Co.
2901 N.W. 62nd Street
FORT LAUDERDALE, FL 33309
Tel: (305) 973-2600

Hewlett-Packard Co.
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (305) 859-2900

Georgia

Hewlett-Packard Co.
2000 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Telex: 810-766-4890

Illinois

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066

Indiana

Hewlett-Packard Co.
11911 N. Meridian St.
CARMEL, IN 46032
Tel: (317) 844-4100

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70083
P.O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500

Michigan

Hewlett-Packard Co.
39550 Orchard Hill Place Drive
NOVI, MI 48050
Tel: (313) 349-9200

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100

Missouri

Hewlett-Packard Co.
1001 E. 101st Terrace Suite 120
KANSAS CITY, MO 64131-3368
Tel: (816) 941-0411

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07653
Tel: (201) 265-5000

New Mexico

Hewlett-Packard Co.
7801 Jefferson N.E.
ALBUQUERQUE, NM 87109
Tel: (505) 823-6100

New York

Hewlett-Packard Co.
9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 682-7800

North Carolina

Hewlett-Packard Co.
5605 Roanne Way
GREENSBORO, NC 27420
Tel: (919) 852-1800

Ohio

Hewlett-Packard Co.
15885 Sprague Road
CLEVELAND, OH 44136
Tel: (216) 243-7300

Hewlett-Packard Co.
9080 Springboro Pike
MIAMISBURG, OH 45342
Tel: (513) 433-2223

Hewlett-Packard Co.
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
Tel: (614) 891-3344

Oklahoma

Hewlett-Packard Co.
3525 N.W. 56th St.
Suite C-100
OKLAHOMA CITY, OK 73112
Tel: (405) 946-9499

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000

Pennsylvania

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400

Hewlett-Packard Co.
2750 Monroe Boulevard
VALLEY Forge, PA 19482
Tel: (215) 666-9000

Texas

Hewlett-Packard Co.
1826-P Kramer Lane
AUSTIN, TX 78758
Tel: (512) 835-6771

Hewlett-Packard Co.
10535 Harwin Drive
HOUSTON, TX 77036
Tel: (713) 776-6400

Hewlett-Packard Co.
930 E. Campbell Rd.
RICHARDSON, TX 75081
Tel: (214) 231-6101

Hewlett-Packard Co.
1020 Central Parkway South
SAN ANTONIO, TX 78232
Tel: (512) 494-9336

Utah

Hewlett-Packard Co.
3530 W. 2100 South St.
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700

Virginia

Hewlett-Packard Co.
4305 Cox Road
GLEN ALLEN, VA 23060
Tel: (804) 747-7750

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000

Wisconsin

Hewlett-Packard Co.
275 N. Corporate Dr.
BROOKFIELD, WI 53005
Tel: (414) 794-8800

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3A Transversal Los Ruices Norte
Edificio Segre 2 & 3
Apartado 50933
CARACAS 1050
Tel: (582) 239-4133
Telex: 251046 HEWPACK

YUGOSLAVIA

Do Hermes
General Zdanova 4
YU-11000 BEOGRAD
Tel: (011) 342 641
Telex: 11433